



STANDARD SENSOR SWITCH

WIRE HARNESS DIAGRAM




This wiring diagram is for a 24-volt AC control circuit.



4 wires exit the main housing toward the bottom of the sensor.

POWER (24V AC)

Connect the black and red wires to the 24-volt AC power source as shown.

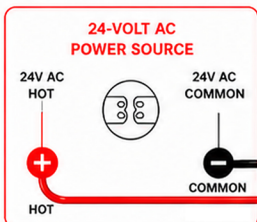


Black and red wires are used for power.



White and yellow wires are used for control.

CONTROL (24V AC)

Connect the white and yellow wires into the AC unit's control circuit.

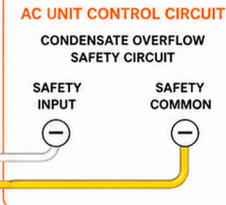

IMPORTANT SAFETY INSTRUCTIONS



1. TURN OFF POWER

Turn off power before installation.



2. CONFIRM ALL CONNECTIONS

Confirm all connections are tight, insulated, and wired according to the diagram before powering the system.